

SLEEKSTER™

FRAME MOUNTED LIGHT BARS


By Randy Ellis Design Inc.

U.S. DESIGN PATENT NO. D521,923



INSTALLATION INSTRUCTIONS

Part # 2005 & 2405 ('99-'12 Superduty/Excursion)

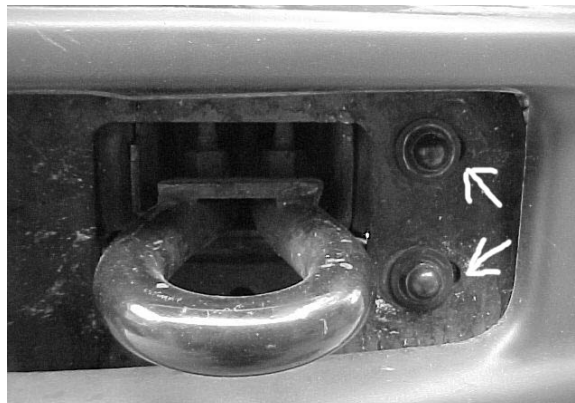

1. Before starting the installation, take note of the bumper gap between the grill.
2. Remove the 4 bumper bolts from the front using an 18mm socket.
NOTE: There is a nut plate on the backside of these bolts
3. Let the bumper drop down. It will only drop down about 2 inches.
4. Retain the factory hardware (bolts and nut plates). The light bar will use these bolts.
5. Hold the light bar up, and re-install the bumper bolts through the light bar, bumper and frame. Then start the bolts in the nut plate by hand.
6. Once all the bolts are started by hand, align the bumper and tighten the 4 bolts.



Install the lights of your choice and enjoy!

Thank you for purchasing quality products from Randy Ellis Design, Inc.

Randy Ellis Design, Inc.

2855 W. Fairmount Ave., Phoenix, AZ 85017

Phone: 602-803-1122

Web: www.randyellisdesign.com

E-mail: info@randyellisdesign.com